Anti-lock brake system (ABS) with electronic differential lock (EDL) and anti-slip regulation (ASR), front wheel drive only

From September 1997

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

Relay panel:

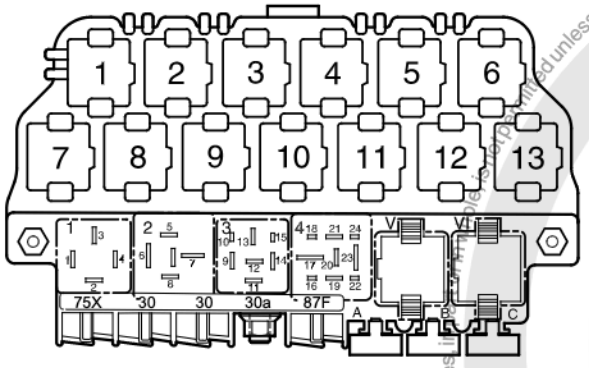

3B–20676

Relay location on the eightfold auxiliary relay panel, behind relay panel:

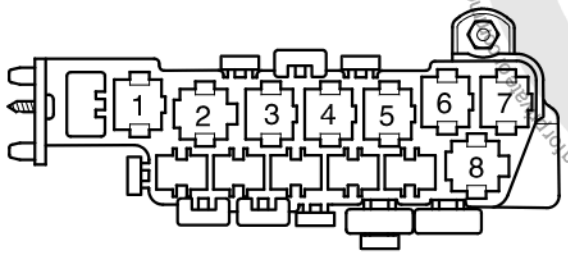

3B–20515

Fuse colors

30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

7,5 A - brown
5 A - beige

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

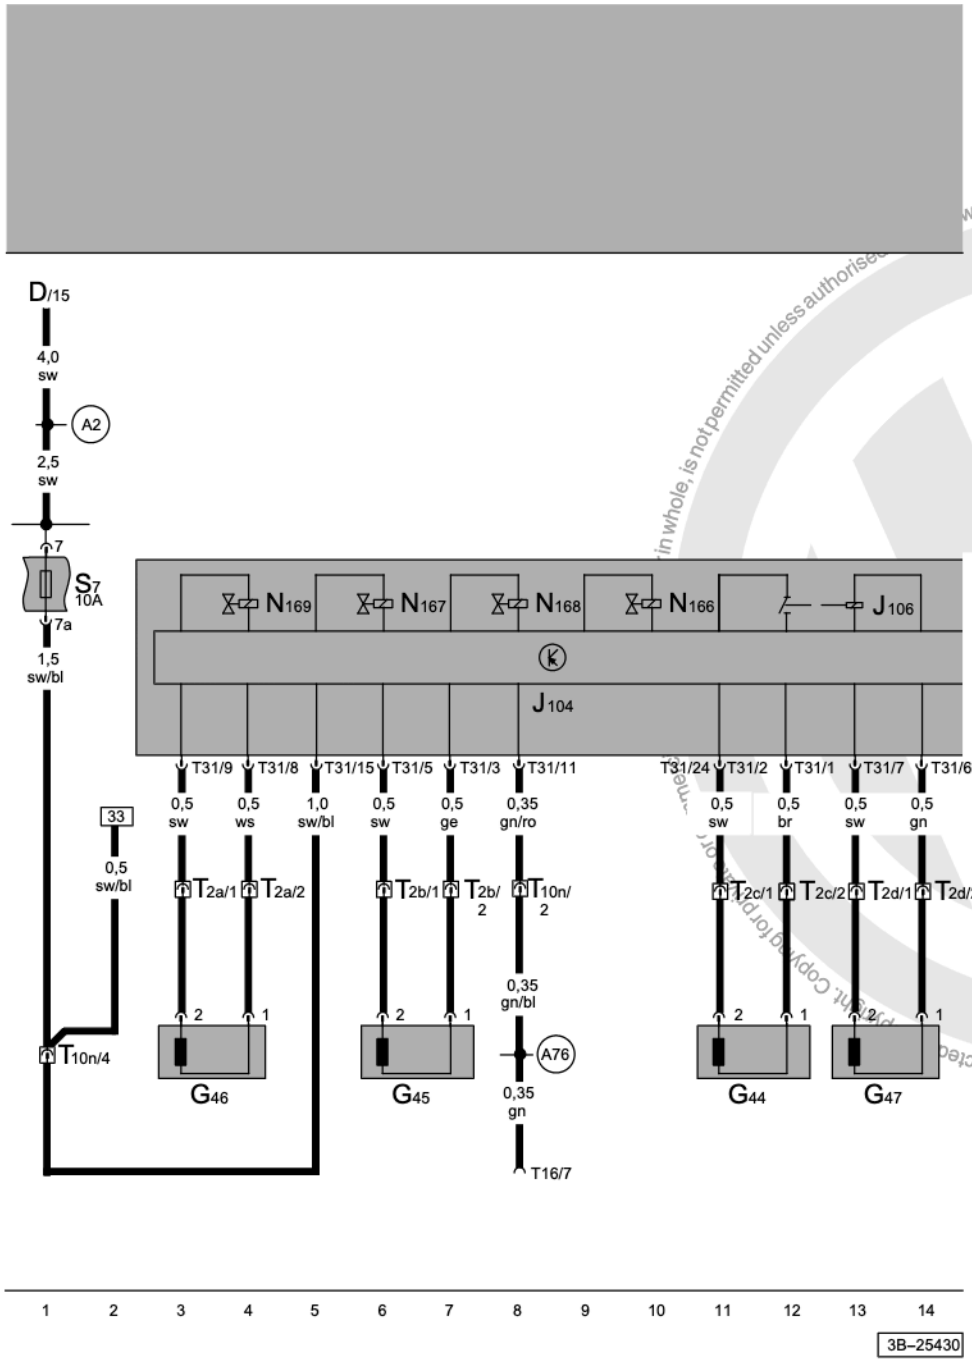

ABS control module (with EDL), ABS wheel speed sensors

D	Ignition/Starter Switch
G44	Right Rear ABS Wheel Speed Sensor
G45	Right Front ABS Wheel Speed Sensor
G46	Left Rear ABS Wheel Speed Sensor
G47	Left Front ABS Wheel Speed Sensor
J104	ABS Control Module (w/EDL)
J106	ABS Solenoid Valve Relay
N166	Right Front Traction Control Switch-Over Valve
N168	Left Front Traction Control Switch-Over Valve
N169	Left Front Traction Control Outlet Valve
S7	Fuse 7 in fuse holder
T2a	2-Pin Connector, (under rear seat)
T2b	2-Pin Connector, (in right front wheel well)
T2c	2-Pin Connector, (under rear seat)
T2d	2-Pin Connector, (in left front wheel well)
T10n	10-Pin Connector, orange, connector station A-pillar, left
T16	16-Pin Connector, Data Link Connector (DLC), below instrument panel, left
T31	31-Pin Connector
A2	plus connection (15), in instrument panel wiring harness
A76	Connector (K-diagnosis wire), in instrument panel wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

wagen AG. Volkswagen AG does not guarantee the correctness of information in this document. Copyright by Volkswagen AG. Protected by copyright. Copying for private or commercial purposes, in whole or in part, is not permitted unless authorised by Volkswagen AG.

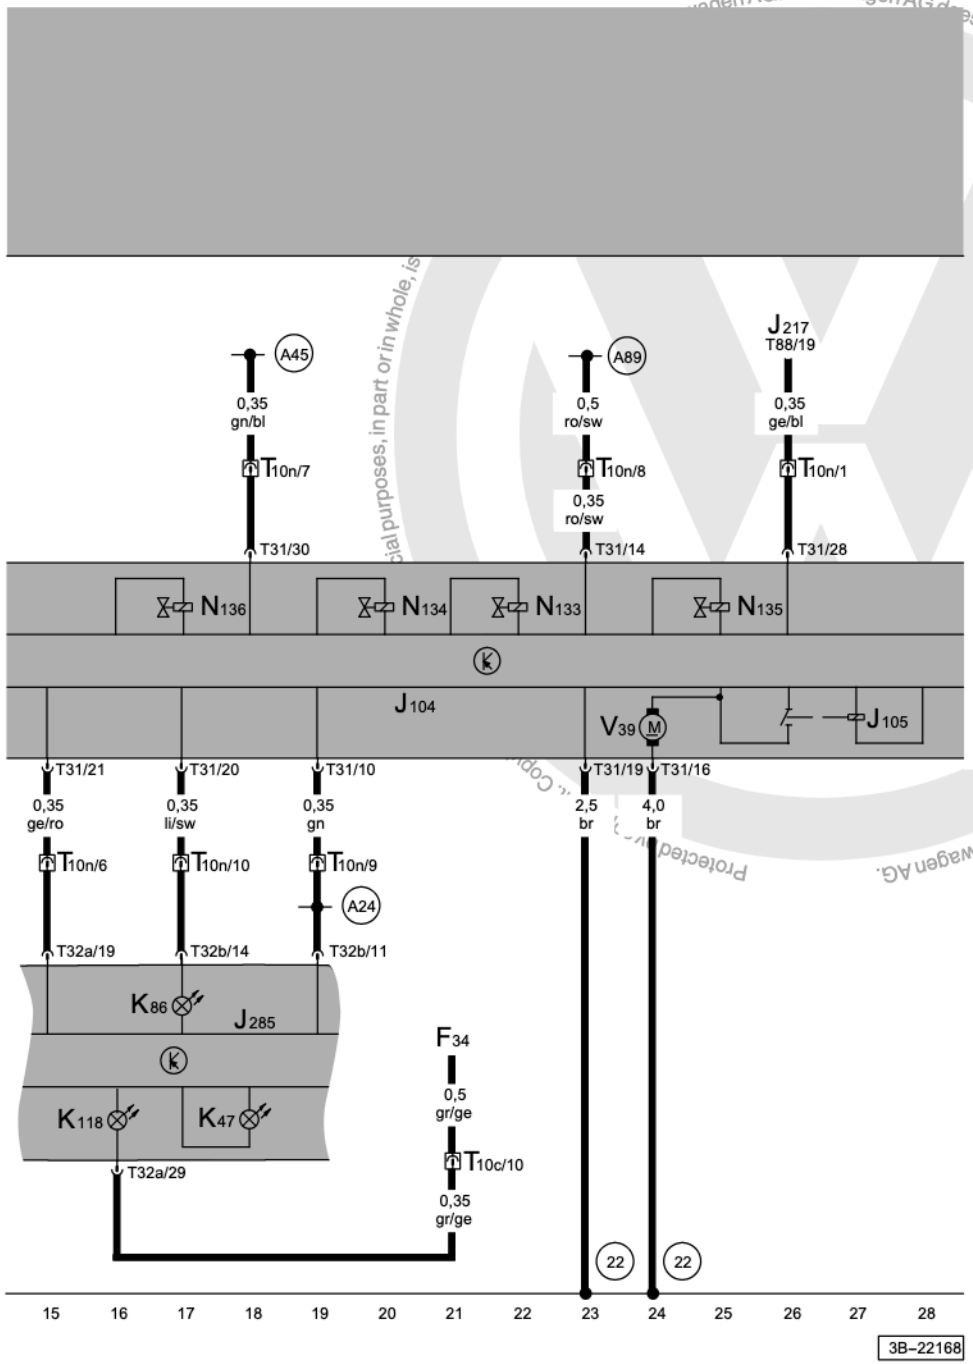

ABS control module (with EDL), ABS return flow pump, ABS warning light, traction control indicator light, Warning light for brake system

F34	Brake Fluid Level Warning Switch
J104	ABS Control Module (w/EDL)
J105	ABS Return Flow Pump Relay
J217	Transmission Control Module (TCM)
J285	Control module with indicator unit in instrument panel insert
K47	ABS Warning Light
K86	Traction Control Indicator Light
K118	Warning light for brake system
N133	Right Rear ABS Inlet Valve
N134	Left Rear ABS Inlet Valve
N135	Right Rear ABS Outlet Valve
N136	Left Rear ABS Outlet Valve
T10c	10-Pin Connector, violet, connector station A-pillar, left
T10n	10-Pin Connector, orange, connector station A-pillar, left
T31	31-Pin Connector
T32a	32-Pin Connector, blue, on instrument cluster
T32b	32-Pin Connector, green, on instrument cluster
V39	ABS Return Flow Pump
T88	Connector, 88 point, on Transmission Control Module (TCM)
22	Ground connection, on hydraulic unit
A24	wire connection (brake system monitoring), in instrument panel wiring harness
A45	wire connection (RPM-signal), in instrument panel wiring harness
A89	Connector (54), in instrument panel wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG. Protected by ... Copyright ... for commercial purposes, in part or in whole, is

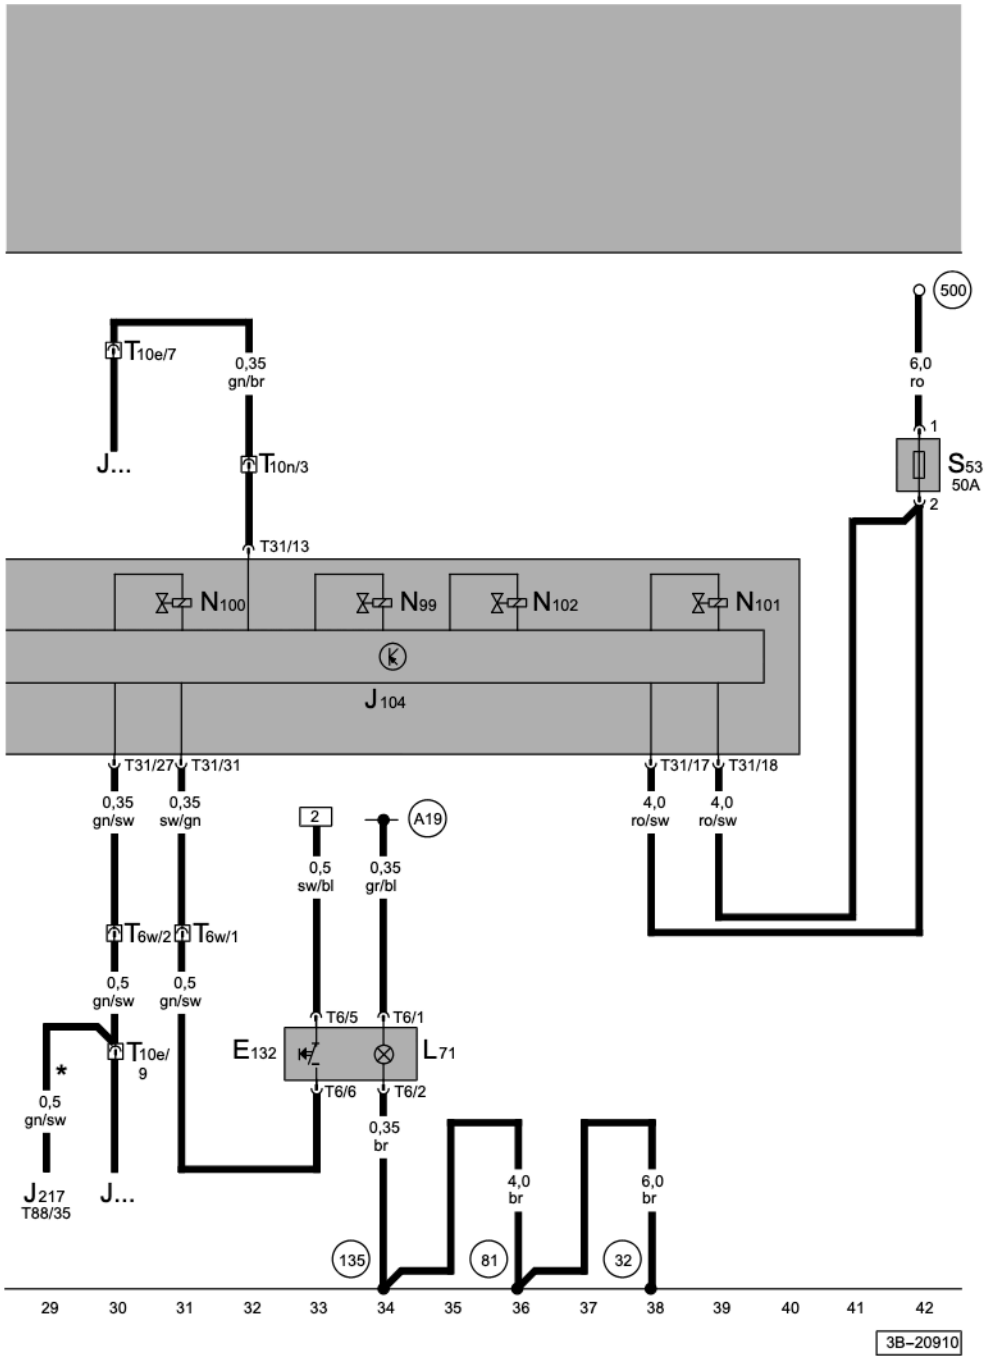

ABS control module (with EDL), anti-slip control switch

E132	Anti-Slip Control Switch
J...	Engine Control Module
J104	ABS Control Module (w/EDL)
J217	Transmission Control Module (TCM)
L71	Anti-slip Control Switch Illumination
N99	Right Front ABS Inlet Valve
N100	Right Front ABS Outlet Valve
N101	Left Front ABS Inlet Valve
N102	Left Front ABS Outlet Valve
S53	ABS Hydraulic Pump Fuse, on the thirteenfold auxiliray relay panel, above relay panel
T6	6-Pin Connector, black
T6w	6-Pin Connector, grey, connector station A-pillar, right
T10e	10-Pin Connector, yellow, on protective housing for control module, in engine compartment, left
T10n	10-Pin Connector, orange, connector station A-pillar, left
T31	31-Pin Connector
T88	Connector, 88 point, on Transmission Control Module (TCM)
32	Ground connection, behind instrument panel, left
81	Ground connection -1-, in instrument panel wiring harness
135	Ground connection -2-, in instrument panel wiring harness
500	Screw connection -1- (30), on relay panel
A19	wire connection (58d), in instrument panel wiring harness
*	automatic transmission only

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.